



### 7. INSPECT AND ADJUST PARK/NEUTRAL POSITION SWITCH

Check that the engine can be started with the shift lever only in the N or P position, but not in other positions.

If not as started above, carry out the following adjustment procedure:

- (a) Loosen the park/neutral position switch bolt and set the shift lever to the N position.
- (b) Align the groove and neutral basic line.
- (c) Hold in position and tighten the bolt.

**Torque: 5.4 N-m (55 kgf-cm, 48 in.·lbf)**

### 8. INSPECT IDLE SPEED (N POSITION)

**Idle speed:**

**750 rpm**

**(In N position and air conditioner OFF)**